## **MONTERINGSANVISNING**






# **AL6 (M58) WIDE ANGLE LIGHTHEAD MANUAL**

14-M581030C, 14-M581430C, 14-M581430B

### **SURFACE MOUNTING**

#### **WIRING**

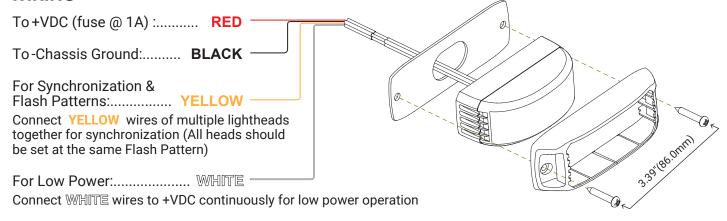

#### **OPERATION**

For Simultaneous or Alternating Flash:

- 1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flashes:
  - Single flash = Group1
  - Double flash = Group2
- 2. Remove YELLOW wire from +VDC then momentarily apply +VDC to change Groups:
  - · Heads of the same Group will flash together.
  - Heads of different Groups will flash alternately.
- 3. Save and Exit the Grouping Mode by powering off the lighthead.

#### For Flash Patterns:

Momentarily apply +VDC to YELLOW wire:

- · once for next pattern
- quick three times for FP#1

NOTE: This unit may not be factory set at FP# 1.

FLASH PATTERNS			
1	Double [R65]	9	Double [SAE]
2	Single [2Hz]	10	Triple [SAE]
3	Triple [2Hz]	11	Quad [SAE]
4	Quad [2Hz]	12	Quint [SAE]
5	Random	13	Ultra [SAE]
6	Steady	14	Single-Quad
7	Single [SAE][CA13]	15	Single H/L
8	Mega [SAE]	16	Singe-Triple-Quint

#### SIDE MIRROR MOUNTING

